


Floor Capacity Load

- 1) Machine weight including standard hammer divided by area enclosed by outrigger support points
 2) Machine weight including standard hammer divided by track contact surface
 3) Max point load measured at tip over load

	Propagated load [kg/m ²] 1)	Load from tracks [kg/m ²] 2)	Max. point load from outriggers [kg] 3)
Brokk 50 and 60	356	2806	795
Brokk 90	422	3313	1019
Brokk 100	437	3434	1432
Brokk 160	386	3894	1998
Brokk 180 flaps	605	4809	3007
Brokk 180 dozer	942	4596	2731
Brokk 260	644	4335	4313
Brokk 330D	733	5500	4913
Brokk 400	773	5944	8418
Brokk 800	1080	7129	20171

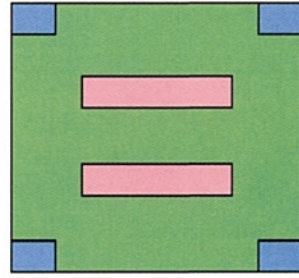

BROKK®

Only for internal use

Note: all values are static loads – numbers are subject to change without notice
 Please consult with the engineer at the site - Brokk assumes no liability for accidents